


CONTROL PANEL

100	When roasting 100g of green coffee
200	When roasting 200g of green coffee
400	When roasting 400g of green coffee

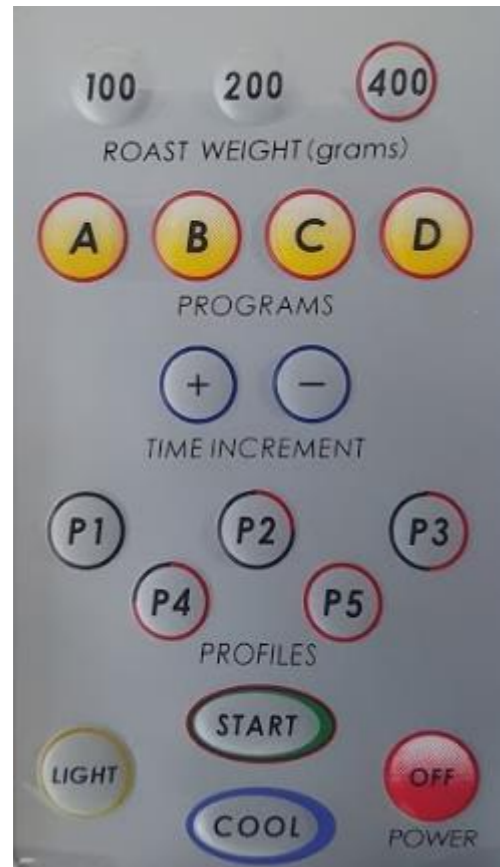


+	Add 15 seconds to the overall time of the roast.
-	Subtract 10 seconds from the overall time of the roast.
START	Start the roast cycle. Keep the roast cycle going when panel flashes 75% into the roast time.
COOL	Stop the roast at any time and begins cooling.
LIGHT	Light switch for viewing the beans.
OFF	Cease all system functions. Use only in emergencies.

AUTOMATIC MODE

There are 5 (P1-P5) pre-set profiles that can be slightly (time) adjusted using the programs (A-D). The standard program time associated with each profile will in most cases get the beans to 2nd crack.


P1 – Hard Bean

Only program A can be used with this profile.

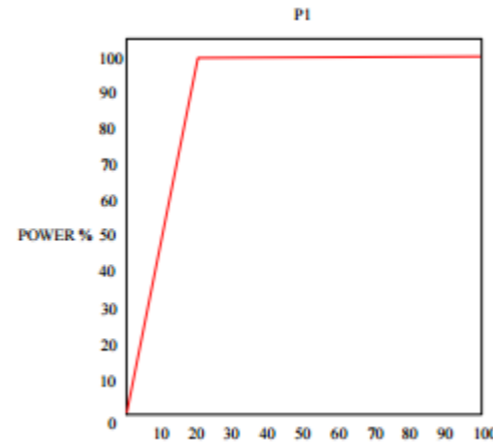


P2 – Hard Bean

Defaults to program B – but A or C can also be used for a slightly shorter or longer roast time.

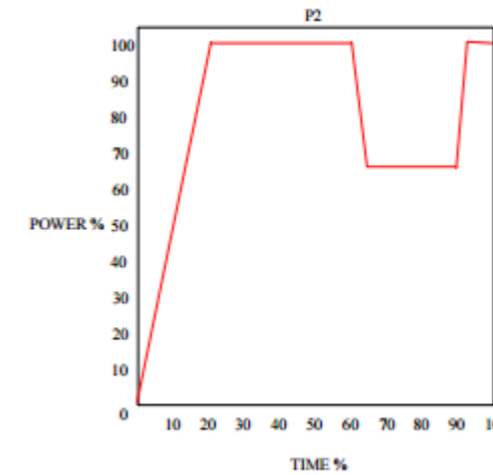


P3 – Soft Bean / Low Grown

Defaults to program C – but A or B can be used to shorten the roast time and D to lengthen it.

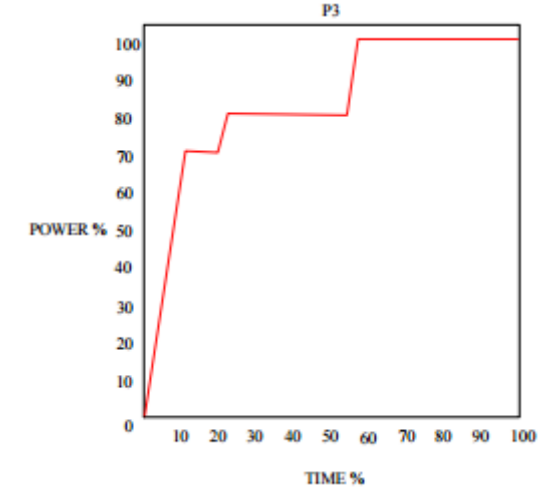


P4 – Soft Bean / Espresso Blends

Defaults to program D, but A, B or C can be used to slightly shorten the roast time.

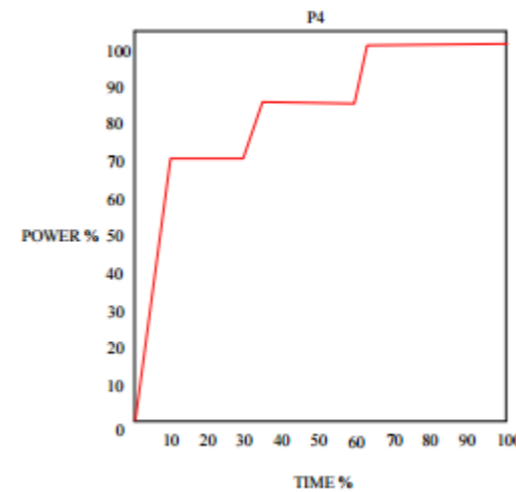

P5 – Hawaiian, Jamaican, Island Coffees / City / City+

Defaults to program D, but A, B or C can be used to slightly shorten the roast time.

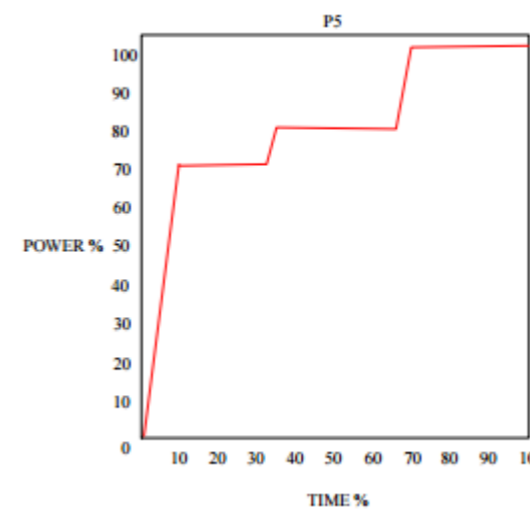

MANUAL MODE

Design your own roasting profile using power, drum speed and time adjustments – monitoring the temperature as you go. Any of these buttons will put you in Manual Mode from Automatic.

400	Toggle between Manual & Automatic mode
A	Read the exhaust channel temperature
B	Read the chamber wall temperature
C	Set Rosetta Stone count down (between 1 st & 2 nd crack)
D	Toggle the drum speed between 8 rpm (default) and 16 rpm

P1	Change to 0% power
P2	Change to 25% power
P3	Change to 50% power
P4	Change to 75% power
P5	Change to 100% power